

SONY



Quick Start Guide Guide de mise en route

VTE-1001

Safety Guide

The Safety Guide contains information about how to safely use your PS TV system, and information about specifications. Be sure to read it before using the system.

User's Guide

The User's Guide contains more information about what your PS TV system can do – just select (User's Guide) on the (Settings) LiveArea™ screen to access it.

You can also view the User's Guide by visiting manuals.playstation.net/document/ – you must have an Internet connection to view the User's Guide.

Get help

The official site for PlayStation® product support provides the latest questions and answers about your product.
us.playstation.com/support

 


4-545-110-11(3)FY

1 Getting started!

Connect your controller to the PlayStation®TV system.

You can use your DUALSHOCK™3 or DUALSHOCK™4 wireless controller with your PS TV system – simply connect your controller's USB cable to the USB port.

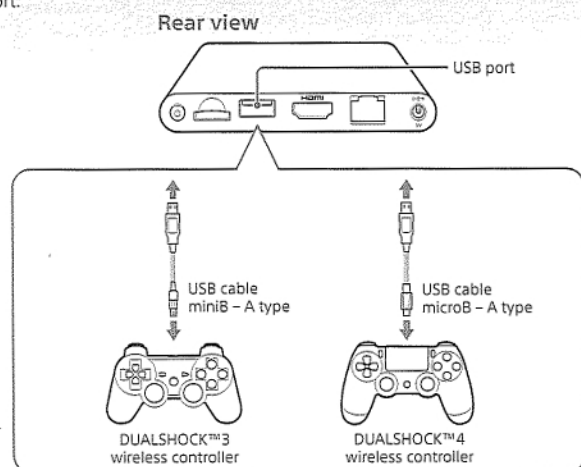

- You must have a USB cable to register (pair) the PS TV system and the controller, and also to charge the controllers. You can remove the USB cable when registering and charging is complete, to play games and use the controller wirelessly.
- USB cable sold separately. You must use the correct USB cable to connect your DUALSHOCK™3 wireless controller (USB cable miniB – A type) or DUALSHOCK™4 wireless controller (USB cable microB – A type) to your PS TV system. We recommend using the USB cable originally supplied with your PlayStation®3 or PlayStation®4 system.

Using memory cards

Although there is 1 GB of internal memory built in to your PS TV system, that may not be enough for you depending on the size of what you save on the system and how you use it. So, if you need more space to save your games and content, you can use a PlayStation®Vita memory card (sold separately).



Caution

- Always power off your PS TV system before inserting or removing the memory card.
- After a memory card is properly inserted, data will be saved to it, and not to the internal memory card. This location where data is saved cannot be changed until the inserted memory card is removed.
- The internal memory card cannot be used when a memory card is inserted.

 
2 Setting up your PS TV system

1 Select the appropriate channel on your TV.

2 Connect your system to your TV.


When you have correctly connected all of the cables, plug the power cord into an electric outlet and the PS TV system will turn on - the white power indicator will light up.

Rear view

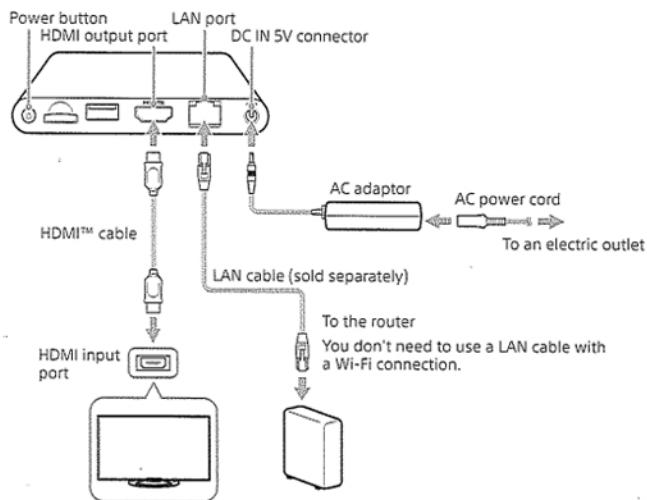

When plugged in, PS TV system will turn on and the power indicator will light up.

Front view

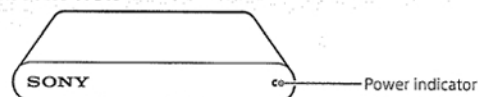

3 Press the (PS) button on your controller.

Your controller will then be registered with your PS TV system.

Hint

Before you can start playing, you'll need to register your controller with your PS TV system.

4 Follow the on-screen instructions.

Choose your date and time and create a Sony Entertainment Network account. Once you complete this initial setup, the home screen will be displayed.



Hint

Create a Sony Entertainment Network account after completing the initial setup. From the home screen, select (Settings) » [PSN™] » [Sign Up]. You can also create a Sony Entertainment Network account using a PS4™ system, PS3™ system or a PC and use your account on the PS TV system.

3 The home screen and basic operations

When you select an application on the home screen, the application's LiveArea™ screen appears. On the LiveArea™ screen, select the application's "gate" to start the application.

Home screen

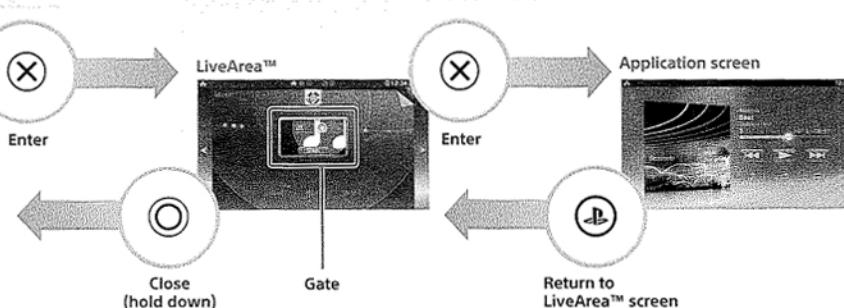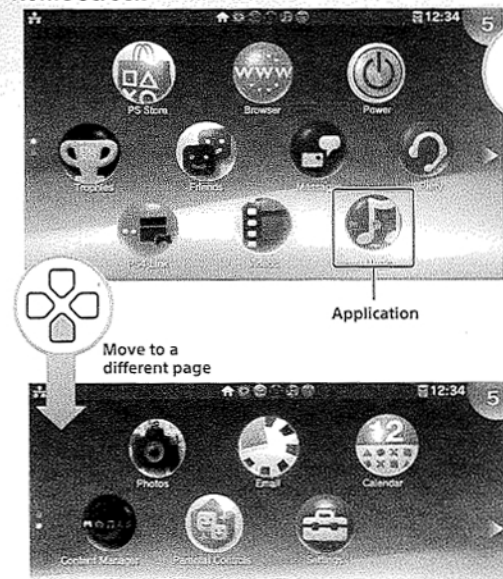

Info bar

You can check the status of the PS TV system at the top of the home screen.



Notification indicator
Select the notification indicator to see the new information.

Hints

- Use the left stick, the L1 and R1 buttons, or the directional buttons for navigation.
- The Topics screen at the top right screen with the latest information cannot be closed.
- You can run multiple applications at the same time, and have a maximum of 10 pages on the home screen.

Basic button operations

- **(PS) button**
Turn on your PS TV system, go back to LiveArea™ screen from application screens, or display the list of LiveArea™ screens (index screen).
- **(PS) button (press and hold)**
Turn off your PS TV system, or adjust your controller's settings. Available options may vary.
- **Directional buttons/Left stick**
Select items.
- **X button**
Confirm the selected item.

Using the DUALSHOCK™4 wireless controller

If your game's manual or any on-screen instructions refer to a SELECT button or a START button, just use the SHARE button or the OPTIONS button, respectively.

- **SHARE button**
This replaces the SELECT button in some games.
- **OPTIONS button**
This replaces the START button in some games.

Hint


The speaker and stereo headset jack on your controller do not function with your PS TV system.

4 Playing games

Some PlayStation®Vita format software is not compatible with this system. For more information, visit <http://www.playstation.com/en-us/explore/playstationtv/compatiblesoftware> or call SCEA Consumer Services at 1-800-345-7669.

1 Insert a PlayStation®Vita card.

A PS Vita card contains PlayStation®Vita format software. Pull the PS Vita card slot cover open and insert your PS Vita card into the PS TV system - the game's icon will then appear on the home screen.

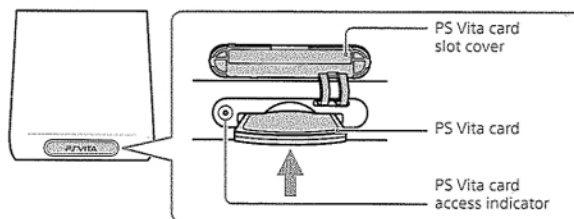

2 Start a game.

On the home screen, select the icon for the game. The LiveArea™ screen for the game appears. Select the "gate". The game starts.

LiveArea™ screen



For more information on compatible software, visit <http://www.playstation.com/en-us/explore/playstationtv/compatiblesoftware> or call SCEA Consumer Services at 1-800-345-7669.



Hint

If your game will not start, select **(Refresh LiveArea™ Screen)** on the LiveArea™ screen. Select **(Update)** when displayed after selecting **(Refresh LiveArea™ Screen)**, and then you can update your game.

3 Pause or quit a game.

Press the **(PS)** button on your controller to return to the LiveArea™ screen. Press and hold the **(PS)** button to close the LiveArea™ screen and quit the game.

Using the on-screen touch pointer when playing a PS Vita game

The touch pointer allows you to use a controller to perform touch operations like you would on a PS Vita system when playing a game. The touch pointer cannot be used on the home screen or the LiveArea™ screen.

To use the touch pointer, press and hold the **(PS)** button, and then check the **[Use Touch Pointer in Games]** option. You can then use the touch pointer in any supported games.



When you press the L3 button, a touch pointer representing the PlayStation®Vita system's touchscreen will appear. Use your DUALSHOCK™4 wireless controller's touch pad to control the on-screen action.



When you press the R3 button, a touch pointer for the rear touch pad appears.



When you press the L3 and R3 buttons at the same time, overlapping touch pointers for both the touchscreen and the rear touch pad will appear.

Hint

Move the touch pointer by using the left and right sticks or by swiping the DUALSHOCK™4 wireless controller's touch pad, and press the **X** button or the touch pad to confirm.

4 Playing games

Enjoying games for the PS4™ system using Remote Play

If you have a PS4™ system, you can use the Remote Play feature to play PS4™ format games on your PS TV system in another room.



1 Connect your PS TV system to the same network as your PS4™ system.

2 Adjust your PS4™ system settings.

- Sign in to PSN™ on your PS4™ system, using the same Sony Entertainment Network account on your PS TV system.
- On the function screen, select (Settings) => [Remote Play Connection Settings], and then check the [Enable Remote Play] option.

3 Operate from your PS TV system.

On your PS TV system, select (PS4 Link) on the home screen and then follow the on-screen instructions to connect it to your PS4™ system.



For details on settings and how to operate, refer to the User's Guide.

Hints

- When using the Remote Play feature, we recommend that you use a wired connection with a LAN cable to the same network as your PS4™ system, and use a DUALSHOCK™4 wireless controller for (PS4 Link).
- Remote Play may not be available while PS4™ system is in use for some operations. Also, some types of content cannot be played while Remote Play is used. For further details, refer to the "About remote play" section of the PlayStation®TV User's Guide.

5 Entering Standby Mode

When in "standby mode" the PS TV system allows you to conveniently resume

Putting your system into standby mode

You can power off your PS TV system, pausing your game. Select (Power) on the home screen, or press and hold the (PS) button on your controller, then select [Standby]. Your PS TV system will enter standby mode, and the power indicator on the front of your PS TV system will turn off.

Hints

- You can also put your PS TV system into standby mode by pressing its (power) button on the rear of your PS TV system.
- In standby mode, press the (PS) button on your controller or the (power) button on the rear of your PS TV system. Your PS TV system will turn on and the power indicator on the front of your PS TV system will light up.

ring any applications that you leave open.

Turning off your system

Always turn off the power completely before inserting or removing a memory card or unplugging the power cord. Select (Power) on the home screen or press and hold the (PS) button on the controller, and then select [Power Off]. Your PS TV system's power indicator will then turn off.

Hint

- You can also turn off your PS TV system by pressing the (power) button on the rear of your PS TV system.
- If you turn off the power, the system will not turn on again when you press the (PS) button on your controller. To turn on, press the (power) button on the rear of your PS TV system and then press the (PS) button on your controller.

"PS" and "PlayStation" are registered trademarks of Sony Computer Entertainment Inc. "PS4", "PS3", "DUALSHOCK", "LIVEAREA" and "PSN" are trademarks of the same company.

"SONY" and "PS" are registered trademarks of Sony Corporation. "Sony Entertainment Network" is a trademark of the same company.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Design and specifications are subject to change without notice. Information about system functionality and images published in this document may vary from those for your PS Vita system, depending on the system software version in use. Also, the illustrations and screen images might vary from the actual product.